 



Quick Start Instructions: DS200 Digital Image Scanner

1. Receive Ballot

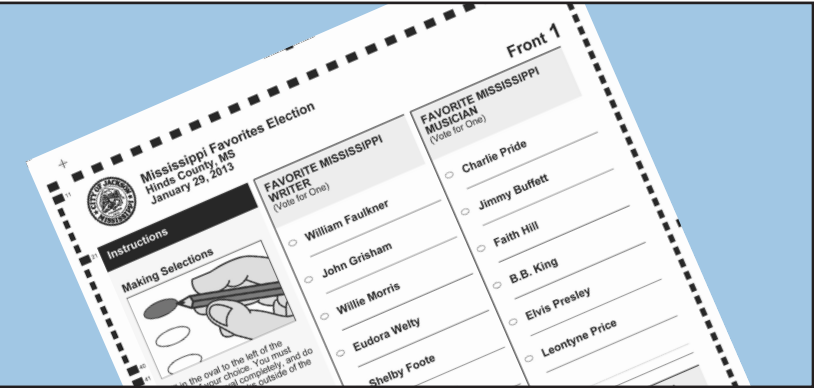

Receive your ballot from poll worker. You may also receive a privacy sleeve to shield your votes from view.

 2. Mark Ballot

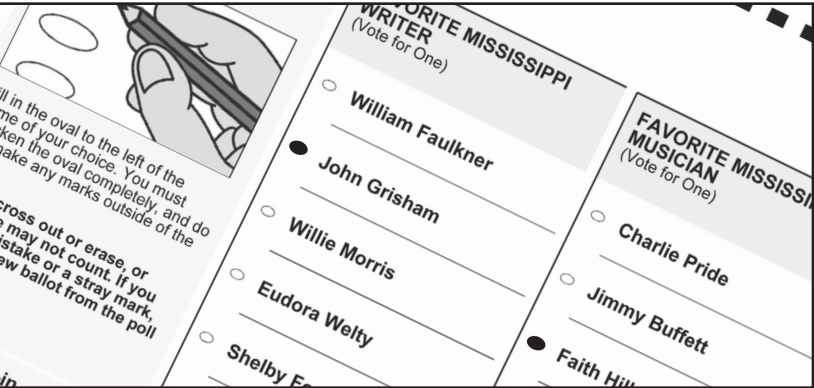


To vote complete the oval to the LEFT of your choice, as shown. To cast a write-in vote, complete the oval to the left of write in space. then print the candidate's name

3. Insert Ballot



Insert your ballot into the DS200. Your ballot can be accepted in any orientation (backwards, upside down, etc.)

4. Review Ballot

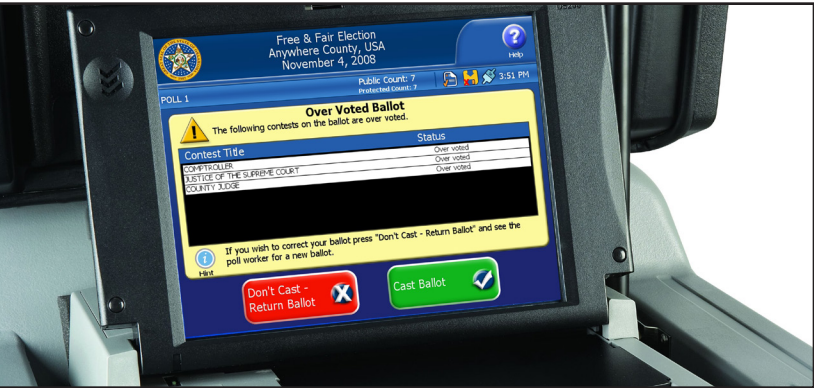

A poll worker will verify the display to see whether there are any issues with the ballot, such as overvoting and blank ballots.

Correctly mark your ballot

It is important to mark your ballot properly before inserting it into the DS200 to ensure that your votes are counted correctly.

Correct

BEST VOCAL ARTIST Vote For Not More Than TWO	
<input checked="" type="radio"/>	FRANK SINATRA
<input type="radio"/>	ELVIS
<input checked="" type="radio"/>	PATSY CLINE

Incorrect

BEST VOCAL ARTIST Vote For Not More Than TWO	
<input type="radio"/>	FRANK SINATRA
<input type="radio"/>	ELVIS
<input checked="" type="radio"/>	PATSY CLINE

- Mark you ballot by completely darkening the oval next to your choice. Do not use an “x” or other notation.
- Do not mark more than the allowable number of selections per contest.
- Make sure all of the races you intend to vote in are marked appropriately.
- If you make a mistake when marking your ballot, ask the election officials for a replacement ballot.

Do not fold your ballot before inserting it into the DS200.

Features and Benefits

2005 VVSG Compliant

With important usability, accessibility, and security enhancements, the DS200® is fully compliant with the rigorous 2005 Voluntary Voting Systems Guidelines.

Accessible

The DS200® is compatible with the AutoMARK®, a breakthrough ballot-marking device, allowing voters with special needs to mark a ballot independently and privately.

Large Communication Screen

12-inch LCD touch screen improves voter communication and can display multiple languages.

Integrated Thermal Printer

Thermal paper eliminates the worry of running out of ink on Election Day.

Power Management

Internal battery pack provides reliable and sustained power management, even in the event of a power outage.

For more information:

P: 402.593.0101

www.essvote.com

■ TF: 1.800.ESS.VOTE

■ F: 402.970.1276

Jackson City Clerk's Office
219 South President Street
Jackson, MS 39201



Election Systems & Software

Quick Start Voting Guide

ES&S DS200

Digital Image Scanner



maintaining voter confidence.
enhancing the voting experience.

